


# 【卓上刀箱2.0 短刀展示KIT】 (改造説明書)

# 刀箱師

KATANA CASE SHI

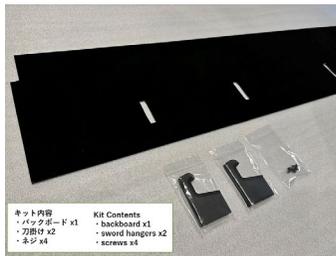


## 注意

アクリルパネルを疵付けないように保護してから行ってください。ラップなどを巻いておくのも良いです。粘着テープの使用はNG。パネルに付くと汚れが二度と取れませんのでご注意ください。




①土台を外す (磁石で固定されています)

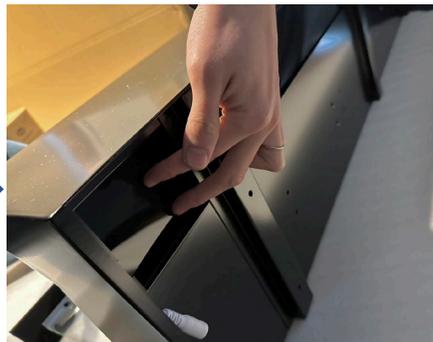


②裏から指で押してバックボードを外す (磁石で固定されています)



③アクリルパネルを傷つけないように気をつけてバックボードを外す

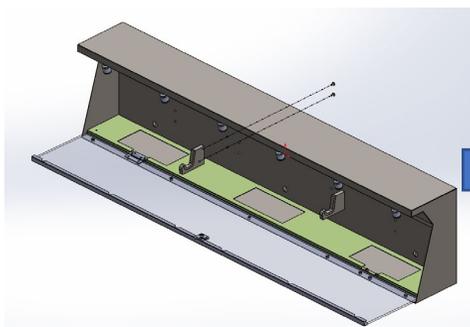

④背面からネジを外して刀掛けを外す

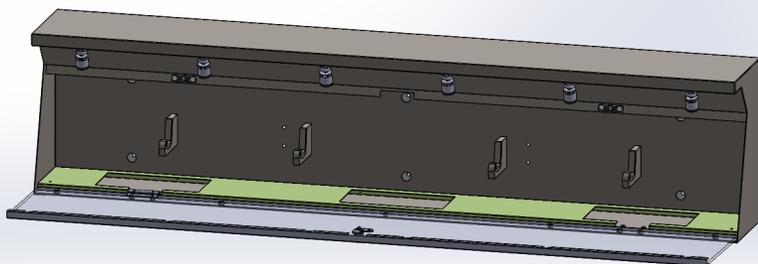

⑤付属の刀掛けを絵の位置に固定する




⑥付属のバックボードを取り付ける

# 【Tabletop katana case2.0 Tanto display Kit】 (Modification Instruction Manual)

刀箱師

KATANA CASE SHI

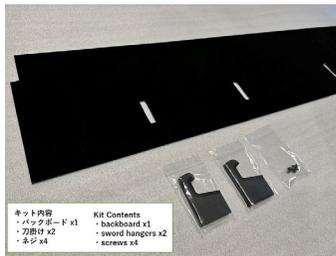


## Caution:


Please ensure to protect the acrylic panel to prevent any scratches before proceeding. Wrapping it in plastic or a similar material can be beneficial. Do not use adhesive tape. If it sticks to the panel, the dirt will never come off, so please be careful.




① Remove the base (it is secured with magnets).

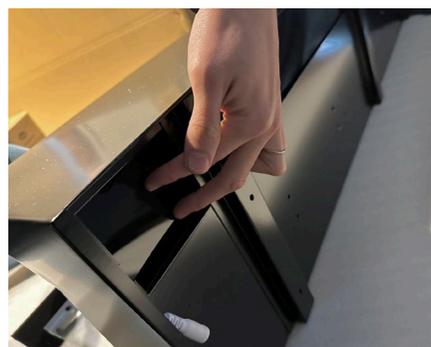


② Push from the back with your fingers to remove the backboard. (It is secured with magnets).

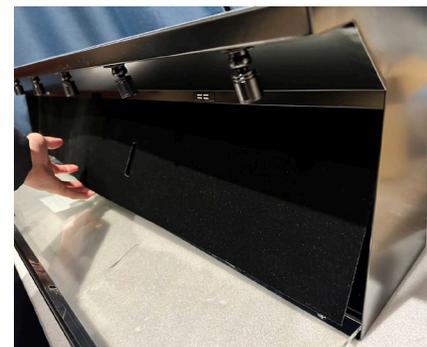

③ Carefully remove the backboard to avoid scratching the acrylic panel.

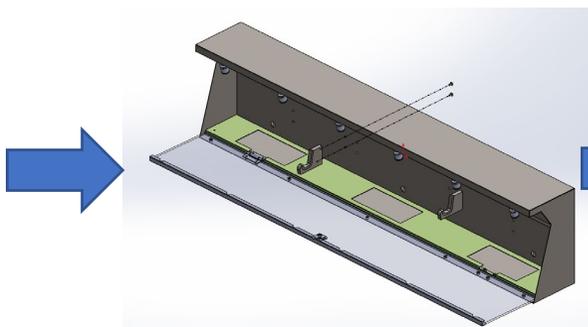

④ Remove the holder by unscrewing it from the back.

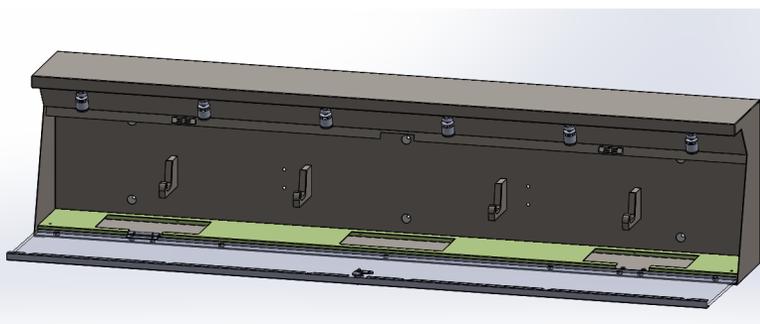

⑤ Secure the included holder to the position indicated in the picture.



⑥ Attach the included backboard.