

【卓上刀箱3.0、卓上脇差箱3.0、卓上短刀箱3.0】（取扱説明書）棚などに置く場合①

設置手順


①付属のACコンセントをケース背面の白いケーブルに繋ぎクランプで線を固定する。



②鍵を回し鍵を持った状態でドアを以下程度まで開け、土台を取り外し付属の調湿材（METAC）を入れる。
アクリル面に指紋が付くと性質上取りづらい為、極力触らないようご注意ください。





土台を外す（磁石で固定されています）ペロアを押しつぶさないよう注意
※箔漆仕様の場合はペロアの土台を外し、入れ変えてください。
ペロアの上に漆板を載せると毛が倒れてしまいます

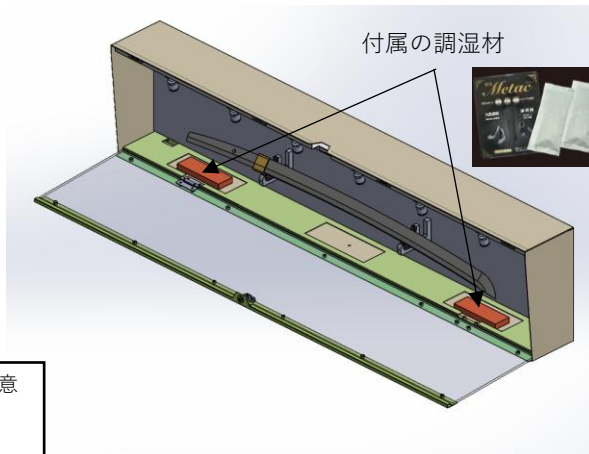

③土台を戻し刀を入れてドアの保護フィルムを剥がす。
（保護フィルムは優しい力で剥がせます。この際反射防止フィルムを誤って剥がさぬよう注意）



④ドアを閉め、ライトを刃に向けて照射。赤矢印あたりを狙うと綺麗に展示可能。
リモコンの調光ボタンで光の強さを変わります。光は弱くした方が綺麗に展示出来ます。

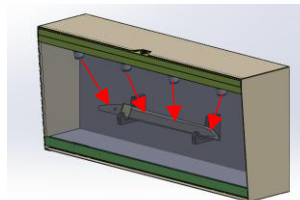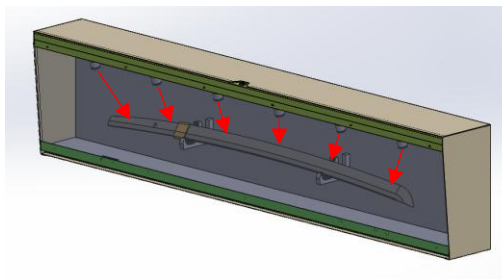


もしライト先端が外れてしまった場合は
押し込めば元に戻ります。



ライトON/OFFボタン

調光ボタン

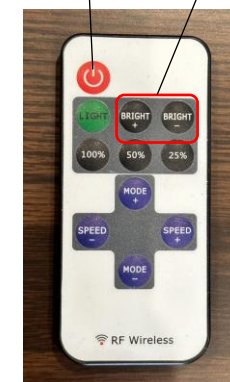

【卓上刀箱3.0、卓上脇差箱3.0、卓上短刀箱3.0】（取扱説明書）壁掛けする場合①

※2名以上の作業を推奨

注意

卓上刀箱は約15kg（脇差箱は約13kg、短刀箱は約10kg）です。壁に十分な強度があるか確認した上で行って下さい。

（※専門業者による取付をお勧めします。壁の強度不足による壁の破損や製品の落下については一切保障できません）

パネルの保護フィルムを剥がす前に行ってください。 アクリルパネルに疵が付きます。

①ACコードを繋ぎ、クランプをして線が抜けないように固定します。

土台を外し、バックボードを外します。バックボードは磁石でくっついていますが、裏から指で押すと外しやすいです。




付属のACコードを繋ぎ
必ずクランプをします。



土台を外す（磁石で固定されています）
※ペロアを押しつぶさないよう注意



ヒンジとパネルが固定されているネジを4か所外しアクリルパネルを外す

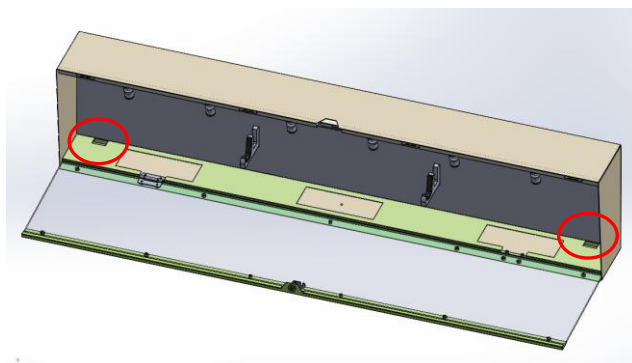

ケース両端にある四角穴に人差し指を入れてペロアシートを取り外します。両手で行うと良いです。※ペロアを押しつぶさないよう注意
（もしどうしても外せない場合は刀受けを外してください。ケース背面からネジ2本を外せば取れます。パネルを外したらネジでもとに戻してください）



②へ続く

【卓上刀箱3.0、卓上脇差箱3.0、卓上短刀箱3.0】（取扱説明書）壁掛けする場合②

刀箱師

KATANA CASE SHI

※2名以上の作業推奨です

- ②付属の金属ネジ6つ（短刀箱はネジ4つ）でケースを壁に直接固定します。間柱など強度のある箇所にケースが平行になるように固定ください。
（※壁が石膏ボードで間柱が無い場所にやむなく固定する場合は付属の石膏ボード用アンカーネジを先に壁に入れてから、ネジ止めしてください。
さもないと落下の危険があります。ご自身で設置される場合は間柱を探す市販品の「下地センサー」が役立ちます）
壁に取り付ける際にACコードがクランプされている事を確認して下さい。線がケースと壁に挟まれて断線の恐れがあります。
壁へ取り付け後にバックボードと土台を戻して保護フィルムを剥がして完成です。


間柱がある場合や木製壁に取り付ける場合（ネジがしっかりかかる場合）



ケースを壁にあてがい、設置位置が決まったら赤丸穴からペンなどでネジを打つ印を付ける。
ケースを床などに置き、まずはネジ1本だけ印の位置に壁との距離が3mm程になるまで締めこむ。
ネジの緩みが無い事を確認しそのネジにケースを引っ掛けて、残りのネジをケースが平行になるよう締める。
（卓上短刀箱は4点固定ですので手で押さえながら行ってください）

土台やペロアを元に戻し、最後に
アクリルパネルの保護フィルムを剥がして完了
※以降は極力パネルに触らないこと。


石膏ボードで間柱等が無い場合（ネジがしっかりかからない場合）

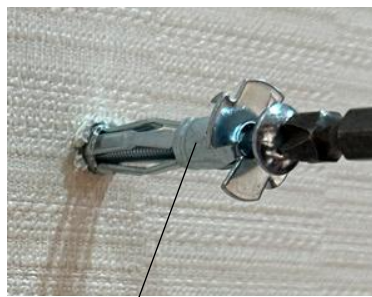

取付位置を事前に確認し、先に
石膏ボードにアンカーをドライバーで
打ち込みます



打ち込むとこのようになります。
ここに付いたネジを一度外して固定します。

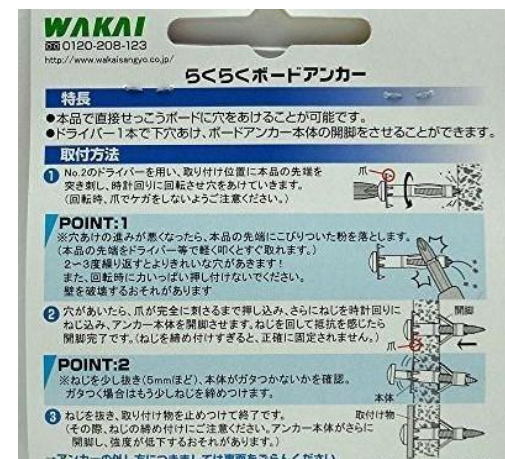

アンカーの取り付け方



ペロアを戻す時は下側から
差し込むようにすると取付
やすいです。

(※必ずお読みください)
刀展示ケースは日常の拭き掃除不要・素手で触らない

納品時はアクリル部に保護フィルムが貼られています。設置後、保護フィルムをお剥がし頂いた後の話になります。



アクリル面には反射防止フィルムが貼られています。非常に繊細ですので取扱いにあたり以下ご注意ください。

- ・ 日常の拭き掃除は不要です。強く拭くとかえって傷が付く可能性があります。
- ・ 素手で直接触れないこと→指紋が付くと目立ち、取りにくいです。
- ・ 埃が気になる場合はマイクロファイバークロスなど柔らかい布で軽くはたく程度にしてください。
ライトの光量を弱くすると埃が目立ちにくいです。
- ・ 粘着テープの貼り付け厳禁→汚れが二度と取れません
- ・ 帯電防止スプレーやガラスクリーナーの使用不可。→反射防止効果が無くなります。
- ・ 指紋や汚れなどが付いた場合、右の「Kenkoカメラレンズ専用クリーナー」をご使用ください。
(amazonで購入可能です→<https://amzn.to/46IFcW8>)



Kenko カメラ・レンズクリーナー

[Tabletop Katana Case 3.0 / Tabletop Wakizashi Case 3.0 / Tabletop Tanto Case 3.0]

Instruction Manual Shelf or Furniture Installation – ①

Installation Instructions

① Connect the AC adapter to the white cable and secure it with the clamp.




② Unlock and open the door as shown. Remove the base and place the included METAC inside.

※Avoid touching the acrylic surface, as fingerprints are difficult to remove.




Remove the base (secured with magnets). Be careful not to crush the velour.
※ For the foil-lacquer version, remove the velour base and replace it with the lacquer panel. Do not place the lacquer panel on the velour, as it may flatten the fabric.

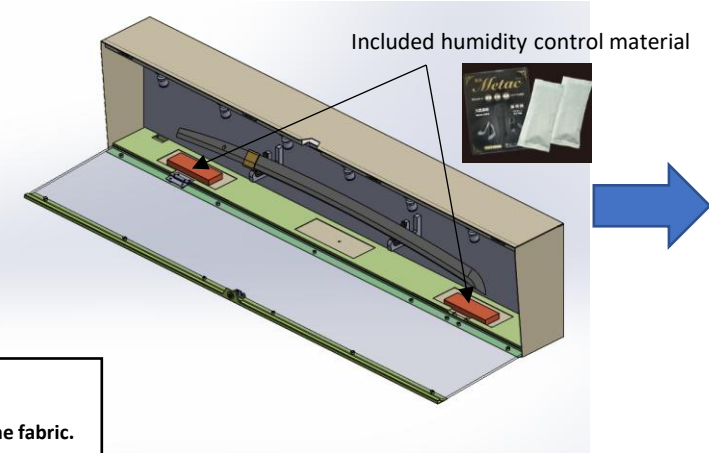


③ Replace the base, place the sword inside, and remove the protective film from the door.

※ Peel gently to avoid removing the anti-reflective film.

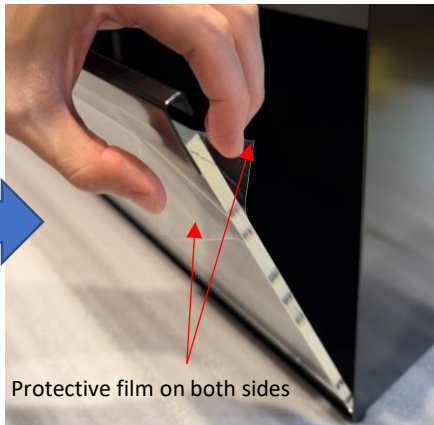


Protective film on both sides

④ Close the door and aim the lights at the blade (red arrows). Adjust the brightness with the remote. Lower brightness gives the best display.

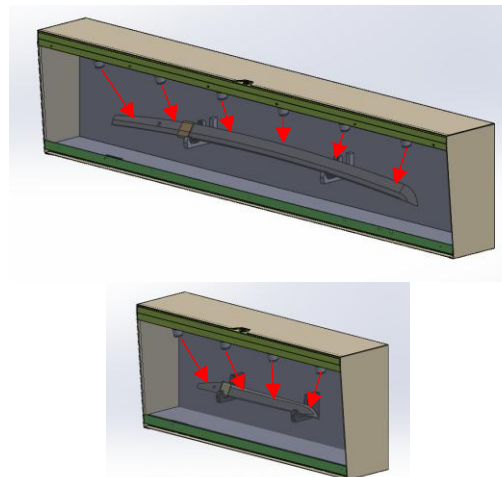


If the light tip comes off, simply push it back in.

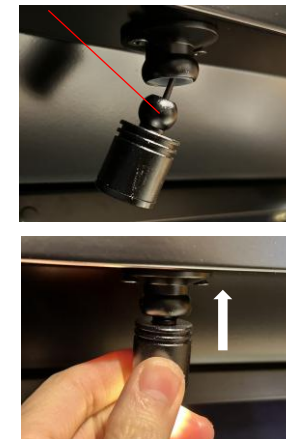

Light ON/OFF Button

Brightness Control Button

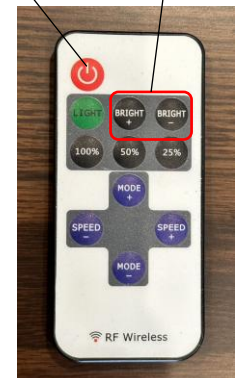

[Tabletop Katana Case 3.0 / Tabletop Wakizashi Case 3.0 / Tabletop Tanto Case 3.0]

Instruction Manual – Wall Mounting ①

※ Two or more people are recommended for installation.

CAUTION

The Katana Case weighs approx. **15 kg** (Wakizashi: **13 kg**, Tanto: **10 kg**). Make sure the wall is strong enough before installation.

※ Professional installation is recommended. We are not responsible for wall damage or the case falling due to insufficient wall strength.

Install before removing the protective film to prevent scratches on the acrylic panel.

① Connect the AC cable and secure it with the clamp.


Remove the base and back panel. The back panel is magnetic and can be easily removed by pushing it from behind.




Connect the supplied AC cable and **always secure it with the clamp.**



Remove the base (magnetically attached).
※ Be careful not to crush the velour.



Remove the four screws securing the panel to the hinges, then remove the acrylic panel.

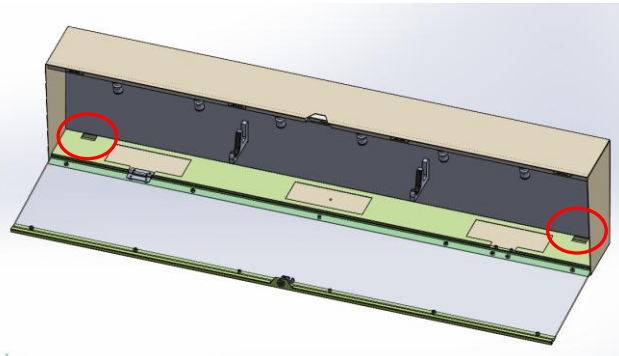

Insert your index fingers into the square holes on both sides and remove the velour panel using both hands. ※ Be careful not to crush the velour.
If difficult to remove, remove the sword support by loosening the two screws on the back. Reinstall it afterward.

Continue to ②

[Tabletop Katana Case 3.0 / Tabletop Wakizashi Case 3.0 / Tabletop Tanto Case 3.0]

Instruction Manual – Wall Mounting ②

※ Two or more people are recommended for installation.

② Secure the case to the wall with the six supplied screws (four for the Tanto Case).


Keep the case level and secure it to wall studs or other strong points.

※ If no stud is available, install the supplied drywall anchors first. Improper installation may cause the case to fall. A stud finder is recommended.

Make sure the AC cable is secured with the cable clamp and is not trapped between the case and wall.

Reinstall the back panel and base, then remove the protective film.

When mounting to wall studs or a wooden wall (where the screws can be securely fastened)

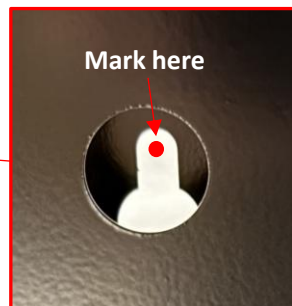


Hold the case against the wall and mark the screw positions through the red-circled holes.
Install one screw first, leaving a **3 mm gap** between the screw head and the wall.
Hang the case on the screw, then tighten the remaining screws while keeping the case level.
※ For the Tabletop Tanto Case, support the case by hand while securing all four screws.

Reinstall the base and velour panel, then remove the protective film from the acrylic panel to complete the installation.


※ After removing the protective film, avoid touching the acrylic panel as much as possible.

When mounting to plasterboard/drywall without wall studs (where the screws cannot be securely fastened)

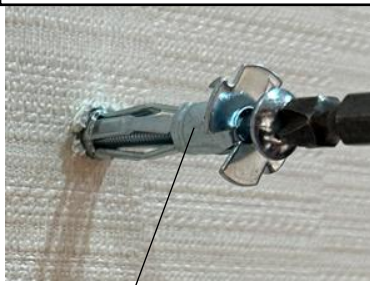

Check the mounting position in advance, then use a screwdriver to install the drywall anchors into the wall first.

Install the anchor as shown.
Remove the screw, then secure the case.

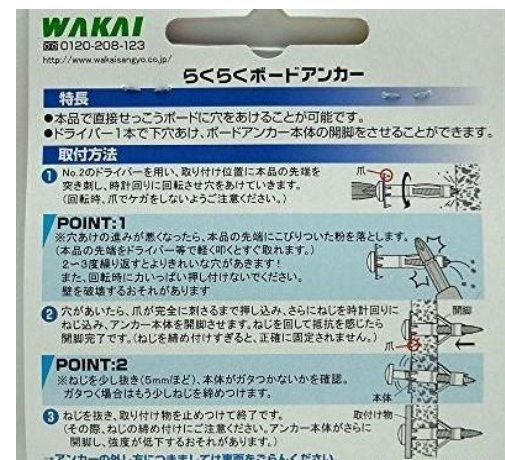


How to Install Drywall Anchors



When reinstalling the velour panel, it is easier to fit it into place by inserting the bottom edge first.

(※Please read carefully.)
No routine wiping required. Do not touch with bare hands.

The acrylic panels are covered with protective film upon delivery. The following instructions apply after installation and after the protective film has been removed.

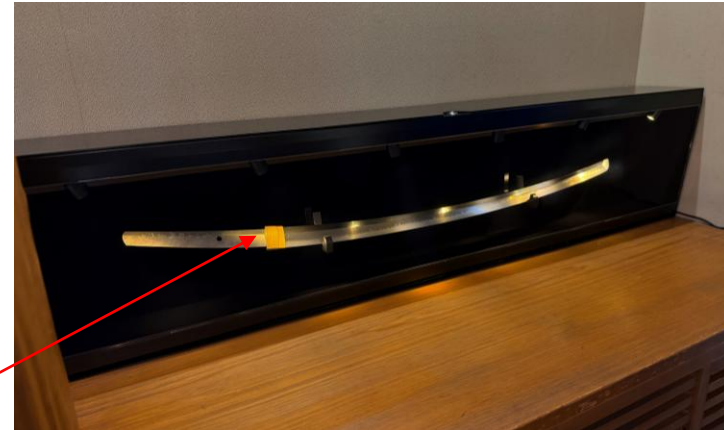

An anti-reflective film is applied to the acrylic surface. As it is very delicate, please observe the following precautions when handling.

- **Routine wiping is not necessary.** Excessive wiping may cause scratches.
- **Do not touch with bare hands.** Fingerprints are highly visible and difficult to remove.
- **If dust becomes noticeable, gently dust with a soft cloth such as a microfiber cloth.** Reducing the light intensity will also make dust less noticeable.
- **Do not apply adhesive tape.** Adhesive residue cannot be removed.
- **Do not use anti-static sprays or glass cleaners** → they will damage the anti-reflective effect.
- If fingerprints or stains appear, please use the “Kenko Camera Lens Cleaner” shown on the right.
(Available for purchase on Amazon. → <https://amzn.to/46IFcW8>)



Kenko Camera Lens Cleaner